



|     |              |
|-----|--------------|
| 1.  | AC           |
| 2.  | Gen Set      |
| 3.  | CP           |
| 4.  | PSU          |
| 5.  | PP           |
| 6.  | Mast         |
| 7.  | BOP          |
| 8.  | TIW Valve    |
| 9.  | QTS          |
| 10. | Lubricator   |
| 11. | Stuffing box |
| 12. | Test Pump    |
| 13. | GIP          |

b. Describe how to connect lubricator section

i) Horizontal

Put lubricator on stand and connect one by one.

ii) Vertical


Connect lubricator using lub-clamp and hanging by mast or crane.

**Note: Provide drawing and parts description on separate paper/page**

c. Sketch the equipment required while rigging up from x-mas tree until stuffing box

JAMES 21/7/24 JMT



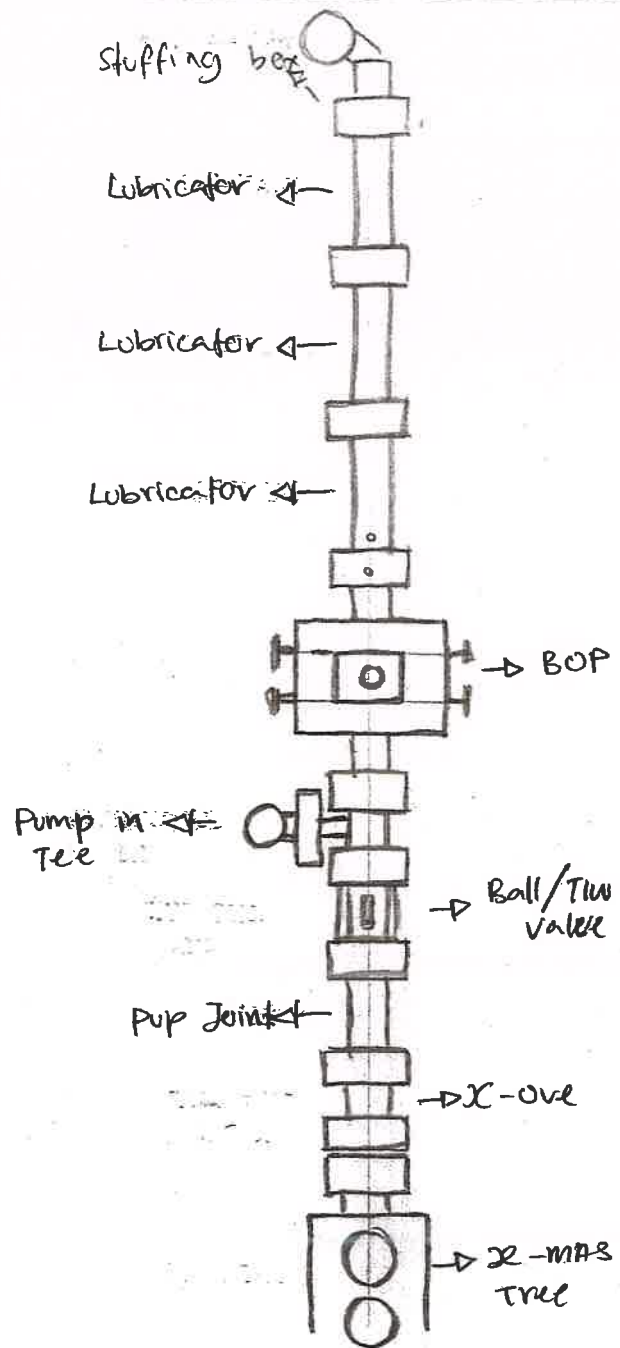

**Note: Provide drawing and parts description on separate paper/page**

d. What should weight indicator attached with?

Weight indicator attached with hose connect to load cell.

James 21/11/24



FIG. 1. Diagram illustrating the steps in the process of...

U.S. DEPARTMENT OF AGRICULTURE  
BUREAU OF PLANT INDUSTRY  
WASHINGTON, D.C.



e. What is the meaning of rigging up and rigging down?

process assemble / disassemble equipment.

f. What is power pack hose size used at Dimension Bid?

- 1" Supply  
1 1/4" Return.

g. What are the safety precautions required upon completed hook up hydraulic hose to RSU

- Ensure connection are tight  
- Use whip check  
- Make sure hyd. hose in rest position.

h. List out the safety precaution while rigging up and rigging down

- Use proper method.  
- Use PPE.

*Note: Provide drawing and parts description on separate paper/page*

James 2/11/24

