


## NTO Continuous Log

Tools » NTO »

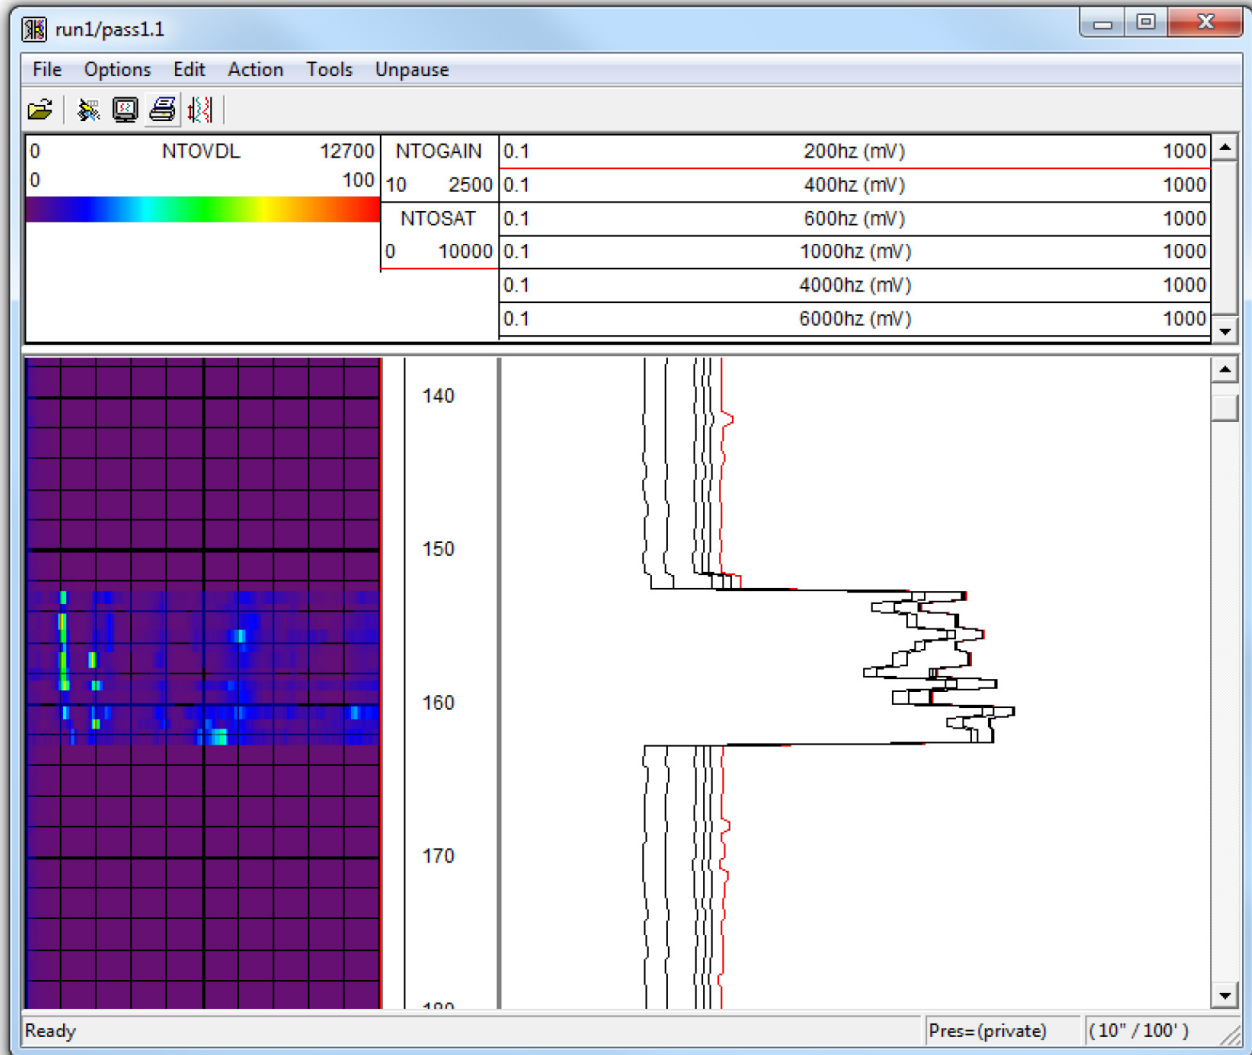

To run a continuous log set the depth and click on **Action > Record Up/Down/On Time** from the **Acquisition** menu. The log will be displayed on the screen and the monitors will automatically update. In addition to the six standard output curves, a VDL (Variable Density Log, i.e. the frequency spectrum) is recorded along with the Gain and Saturation Count.



Copyright © 2015 Sondex Wireline Ltd. All Rights Reserved.